HR-09 Type4 Heatsink

Exploded View

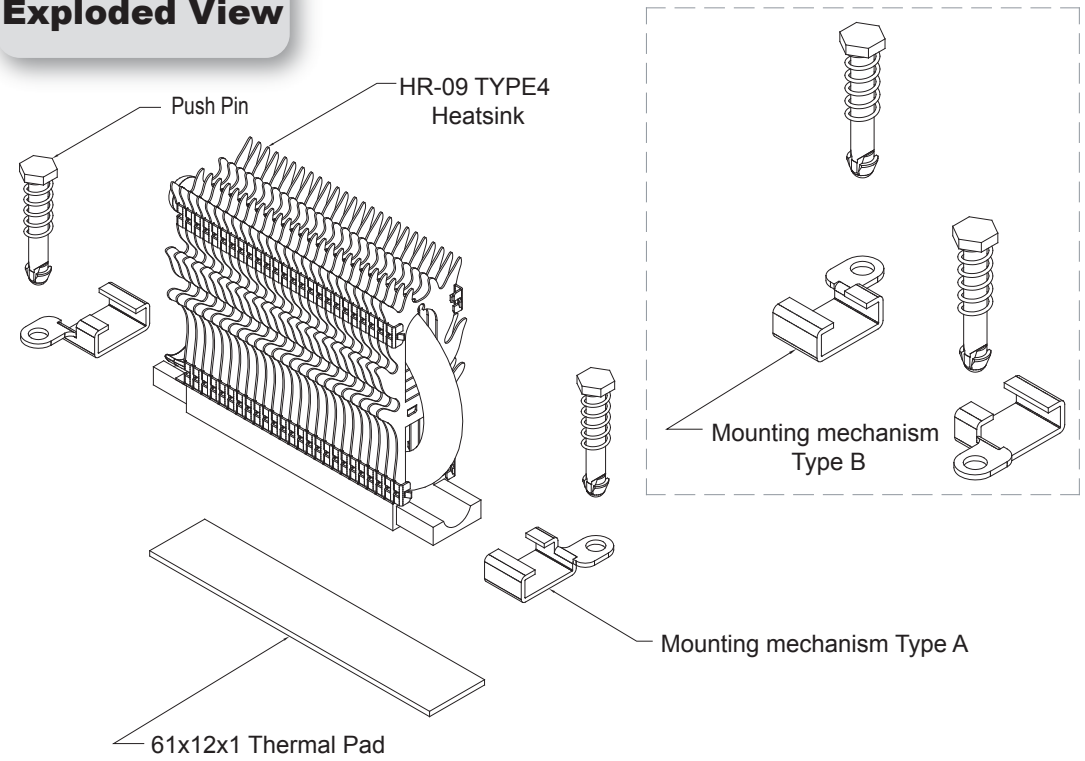

Component

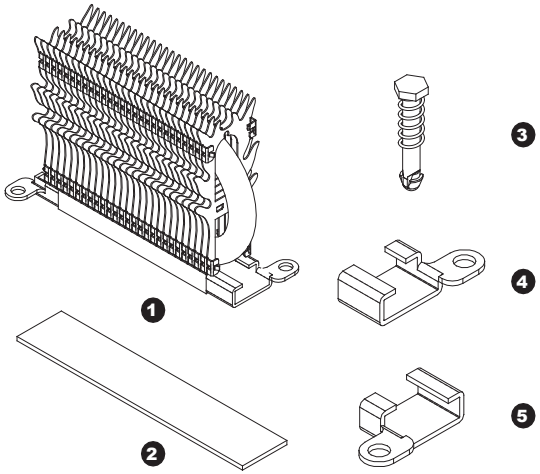

Parts Name	Piece(s)
❶ HR-09 TYPE4 Heatsink	1
❷ 61x12x1 Thermal Pad	1
❸ Push Pin	2
❹ Mounting mechanism Type A	2
❺ Mounting mechanism Type B	2

Installation

Important! Before proceeding with installation, please check for the most up-to-date instructions at www.thermalright.com

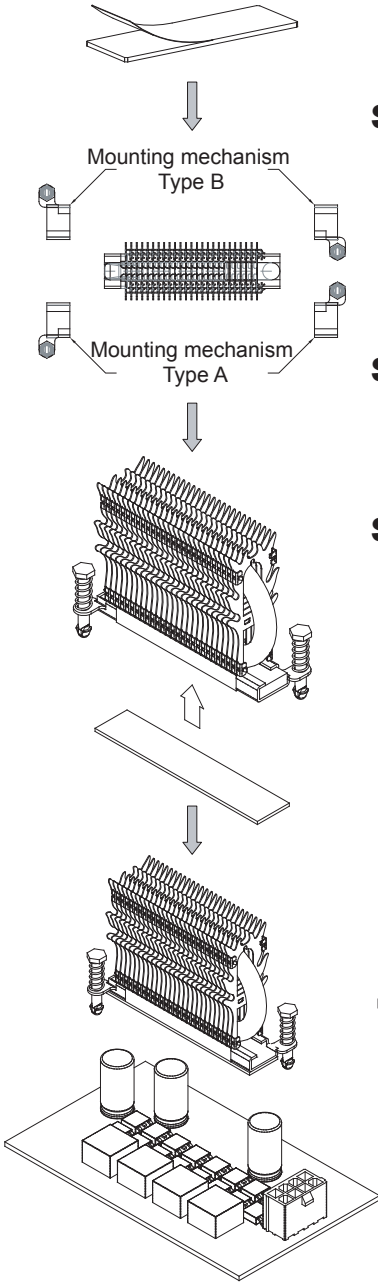

Step 1: Thermal Pad Application

Apply 61x12x1mm thermal pad directly to bottom of heatsink base

Step 2: Mounting Mechanism Selection

Select the appropriate mounting mechanism that aligns with the mounting holes on your motherboard. Insert at each end of heatsink and then insert push-pins through holes on the mounting mechanism.

Step 3: Removal of Stock Heatsink

Before installation of HR-09, remove stock PWN heatsink.

Step 4: Heatsink Installation

Place HR-09 Type 4 heatsink directly onto the PWN chips. Insert push pins through mother-board mounting holes and press down to secure in place. Installation completed.